1854022
X-Stanton Lower Wood Door Bookcase-CG
Parts and Hardware List

A.	Top Assembly	1 pc
B.	Left Side Panel	1 pc
C.	Right Side Panel	1 pc
D.	Bottom Assembly	1 pc
E.	Back Panel	1 pc
F.	Left Door	1 pc
G.	Right Door	1 pc
H.	Adjustable Shelf	1 pc
I.	Shelf Supports	8 pcs
J.	Handles	16 pcs
K.	Connecting Bolts	8 pcs
L.	Eccentric Cams	8 pcs
M.	Plastic Caps	8 pcs
N.	Phillips Head Bolts	16 pcs
O.	Pan Phillips Head Screws	16 pcs
P.	Flat Phillips Head Screws	8 pcs
Q.	Phillips Head Screwdriver	1 pc
R.	Flat Head Screwdriver	1 pc

* Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
* Use the hardware illustrations to determine correct piece and size.
* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
* This item may require periodic tightening.

1854022

X-Stanton Lower Wood Door Bookcase-CG

Hardware Illustrations



I. Shelf Support

K. Connecting Bolt

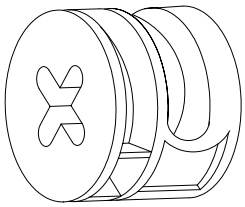

L. Eccentric Cam

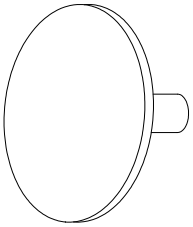

M. Plastic Cap



N. Phillips Head Bolt



O. Pan Phillips Head Screw



P. Flat Phillips Head Screw

1854022
X-Stanton Lower Wood Door Bookcase-CG

Attach Left & Right Side Panels

Parts required

A.	Top Assembly	1 pc	L.	Eccentric Cams	8 pcs
B.	Left Side Panel	1 pc	M.	Plastic Caps	8 pcs
C.	Right Side Panel	1 pc	Q.	Phillips Head Screwdriver	1 pc
D.	Bottom Assembly	1 pc	R.	Flat Head Screwdriver	1 pc
K.	Connecting Bolts	8 pcs			

1. **Attach Connecting Bolts (K)** Align the exposed threads on the Connecting Bolts (K) with the pre-threaded holes in the Top & Bottom Assemblies (A, D). Tighten in a clockwise direction using the Flat Head Screwdriver (R). See Illustration #1.
2. **Attach Left & Right Side Panels (B, C)** Align the Connecting Bolts (K) in the Top & Bottom Assemblies (A, D) with the pre-drilled holes in the ends of the Left & Right Side Panels (B, C). Be sure the dowels in the Left & Right Side Panels (B, C) align with the pre-drilled holes in the Top & Bottom Assemblies (A, D). Insert the Eccentric Cams (L) into the pre-drilled holes in the Left & Right Side Panels (B, C). Make sure the groove in the Eccentric Cams (L) faces out and the arrow points toward the Connecting Bolts (K). Use the Phillips Head Screwdriver (Q) to adjust the Eccentric Cams (L) to lock the Connecting Bolts (K) in place by turning in a clockwise direction. Cover all the Eccentric Cams (L) with the Plastic Caps (M). See Illustration #1.

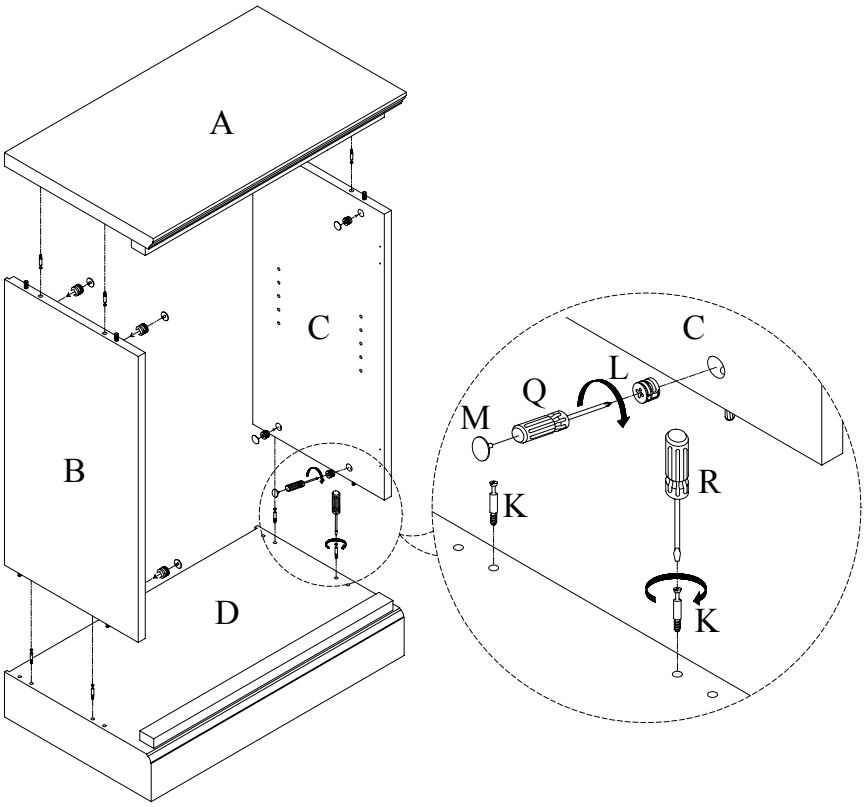

Illustration # 1

1854022
X-Stanton Lower Wood Door Bookcase-CG

Attach Back Panel, Door and Adjustable Shelves

Parts required

A.	Top Assembly	1 pc	H.	Adjustable Shelf	1 pc
B.	Left Side Panel	1 pc	I.	Shelf Supports	4 pcs
C.	Right Side Panel	1 pc	J.	Handles	16 pcs
D.	Bottom Assembly	1 pc	N.	Phillips Head Bolts	16 pcs
E.	Back Panel	1 pc	O.	Pan Phillips Head Screws	16 pcs
F.	Left Door	1 pc	P.	Flat Phillips Head Screws	8 pcs
G.	Right Door	1 pc	Q.	Phillips Head Screwdriver	1 pc

3. **Attach Back Panel (E)** Place the Back Panel (E) into the grooves in the Left & Right Side Panels (B, C) & Top and Bottom Assemblies (A, D). Secure in place with the Pan Phillips Head Screws (O) using the Phillips Head Screwdriver (Q). See Illustration #2.
4. **Attach Left & Right Doors (F, G)** Align the pre-drilled holes in the Right Door (G) with the pre-drilled holes in the hinges of Right Side Panel (C). Secure with Flat Phillips Head Screws (P) using Phillips Head Screwdriver (Q). Repeat to attach Left Door (F). See Illustration #2.
5. **Attach Handles (J)** Align the pre-threaded holes of Handles (J) with the pre-drilled holes in the Left & Right Doors (F, G). Secure in place with Phillips Head Bolts (N) using Phillips Head Screwdriver (Q). See Illustration #2.
6. **Attach Adjustable Shelf (H)** Insert the Shelf Supports (I) into the desired pre-drilled holes in the Left & Right Side Panels (B, C). Place the Adjustable Shelf (H) on Shelf Supports (I). See Illustration #2.

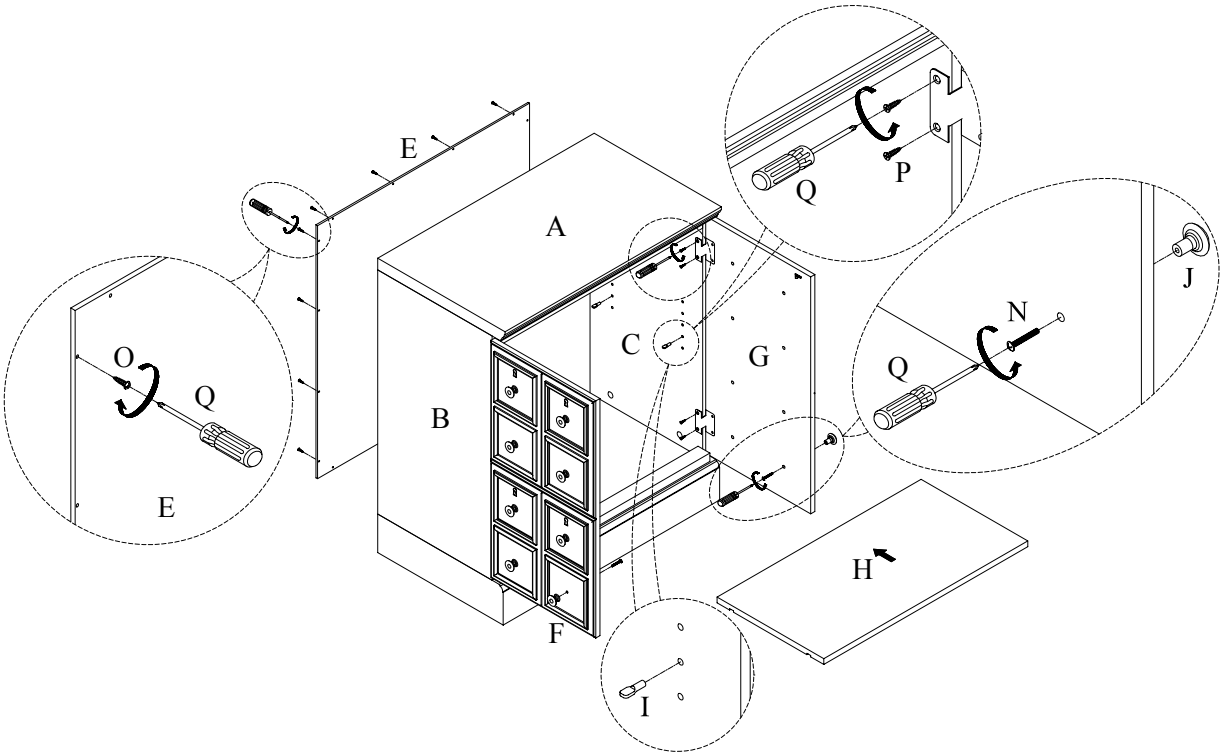

Illustration # 2